
INSTALLATION GUIDE

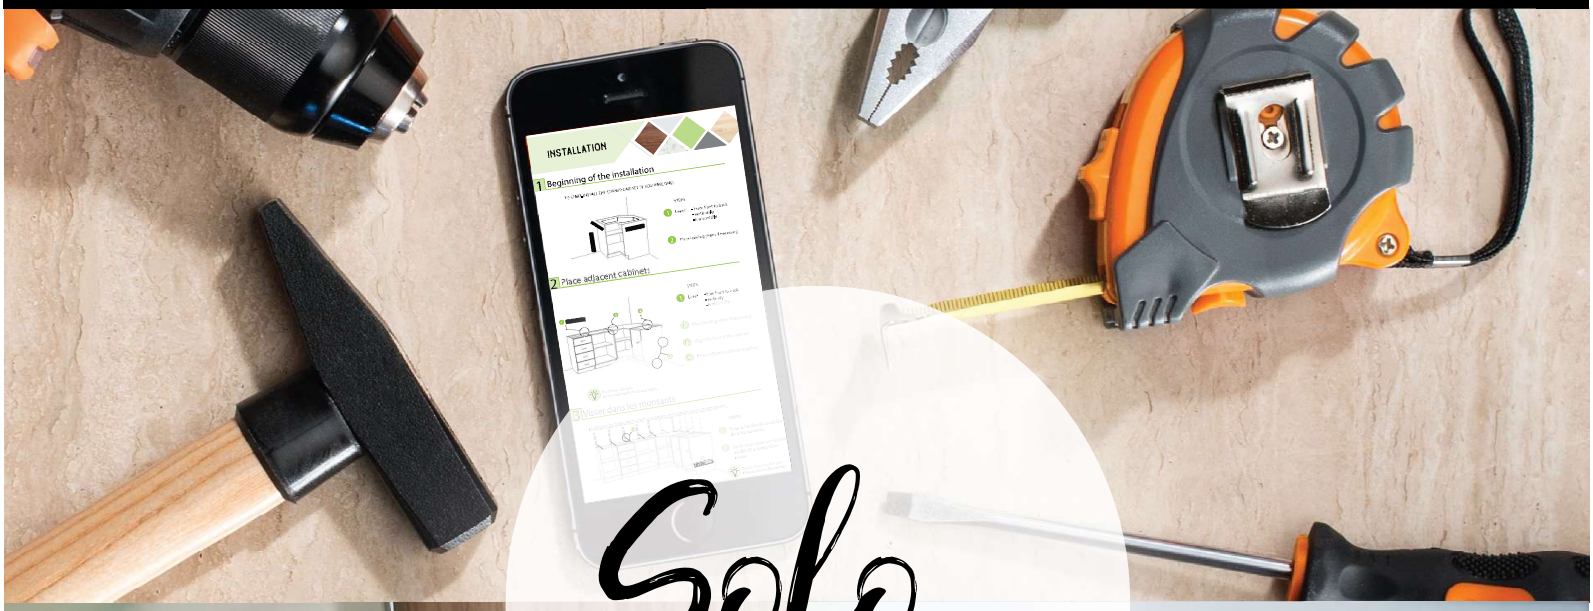

Solo

COLLECTION BY TRIFAB INC





2718, Principal st.,Tracadie E1X 1A1 1263, Principal st., Beresford 1-877-395-3764


- CABINET INSTALLATION TIPS
- RECOMMENDATIONS
- HINGE AND DRAWER SLIDE ADJUSTEMENT
- IMPORTANT INFORMATION

INSTALLATION

BEFORE INSTALLATION, REMOVE ALL DOORS AND DRAWERS FROM YOUR CABINETS.
You can refer to page 6 for more details.

1 Beginning of the installation


TO START, INSTALL THE CORNER CABINET (IF YOU HAVE ONE)

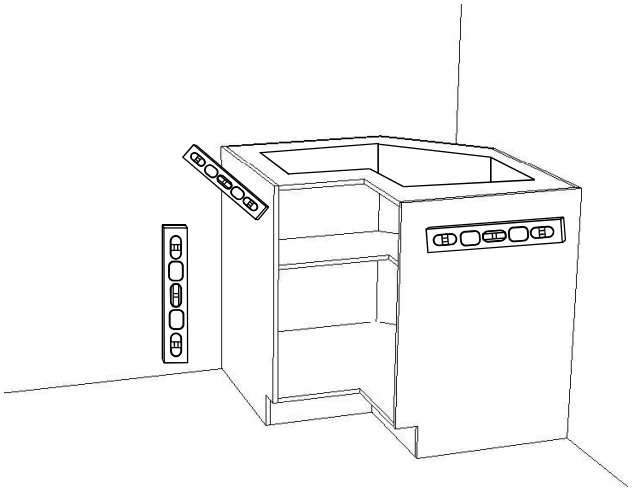

STEPS

1. Level: - from front to back
   - vertically
   - horizontally
2. Place leveling shims if necessary.

2 Place adjacent cabinets

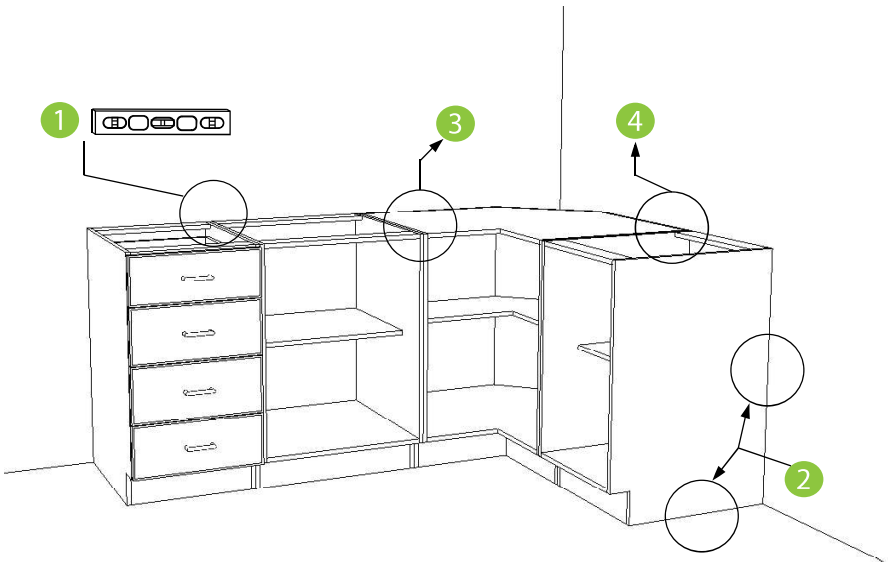


STEPS

1. Level: -from front to back
   - vertically
   - horizontally
2. Place leveling shims if necessary.
3. Align the front of the cabinets.
4. Screw adjacent cabinets together.

For drawer modules, screw underneath the drawer slides.

3 Screw into studs

WHEN THE CABINETS ARE LEVEL, SCREW THEM INTO THE STUDS.

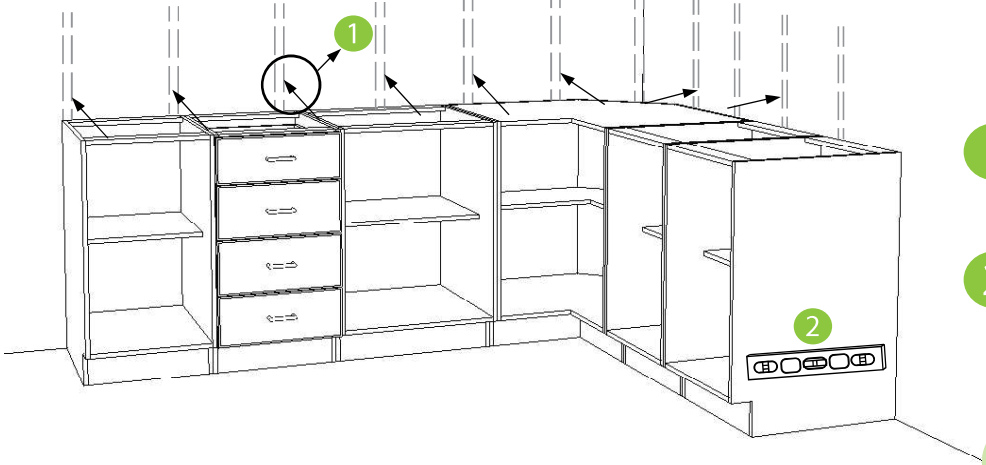


STEPS

1. Screw through the back of the cabinets into the studs.
2. After screwing a cabinet, check if it has remained level.

Do not over-tighten screws to avoid distorting the cabinets.

4 Install tall cabinets

UPPER MODULES WILL BE ALIGNED WITH THE PANTRY MODULE.

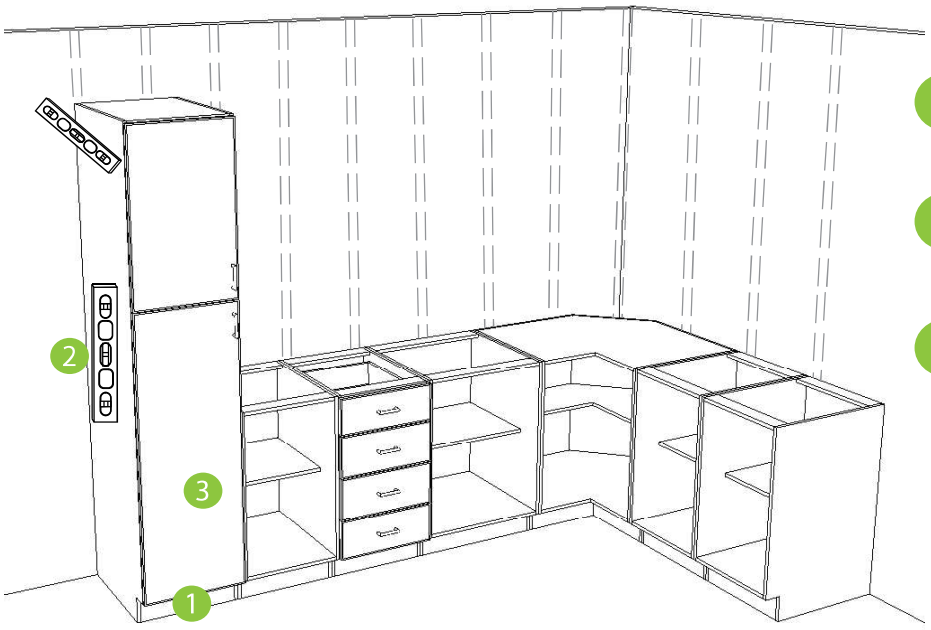

STEPS


1. Place the cabinet in its designated location.
2. Level: - vertically
   - horizontally
3. Screw into adjacent cabinets and into the wall studs.

IF YOU DO NOT HAVE TALL CABINETS, PROCEED TO STEP 5.

INSTALLATION

5 Upper cabinet installation

START THE UPPER MODULES INSTALLATION BY POSITIONING THE CORNER MODULE FIRST

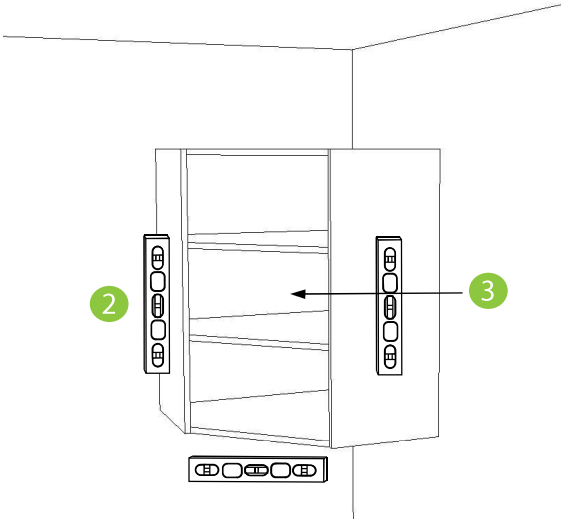


STEPS

1. Align the top of the module at 84\1/8" from the floor, or with the top of the tallest module.
2. Level: - vertically
   - horizontally
3. Screw the back into the studs (do not over-tighten).

CONTINUE THE INSTALLATION WITH THE CABINETS ADJACENT TO THE CORNER MODULE.

IT IS NORMAL FOR THE SIDES OF THE CORNER MODULE TO BE 1/4" DEEPER THAN THE MODULES ON EITHER SIDE OF IT.

6 Installing the panels

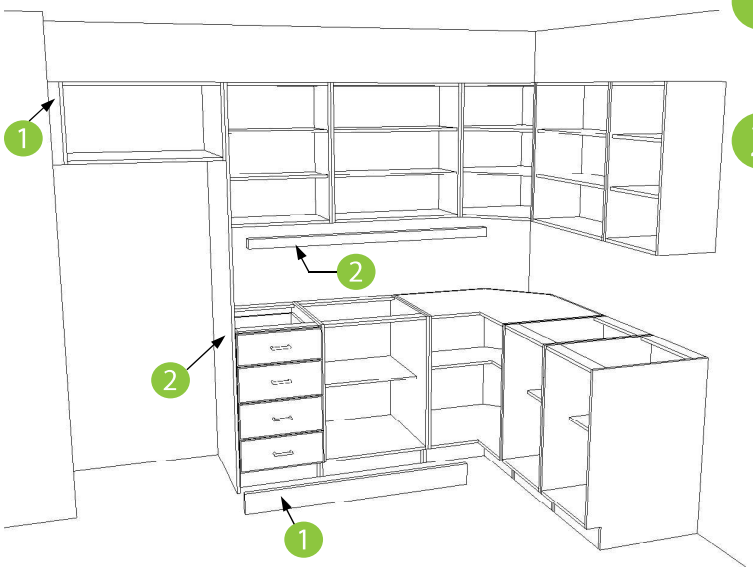

1. Screw the filler panels. For those against the wall, screw from inside the module, flush with the edge of the cabinet.
2. Install the finishing panels at the steps that are most convenient (refrigerator panels, dishwasher panel, island side and back panels, light valances).

Measure, cut your light valance moldings, and install them $1/8"$ back from the edge of the cabinets.


Measure and cut your crown moldings according to the desired design.

INSTALLATION

YOU CAN NOW PUT YOUR DOORS AND DRAWERS BACK INTO THEIR RESPECTIVE PLACES AND MAKE DOOR AND DRAWER ADJUSTMENTS (see pages 6 and 7).

7 Handles

WHEN THE DOORS AND DRAWERS ARE LEVEL, SCREW THE HANDLES INTO THE FRAME.

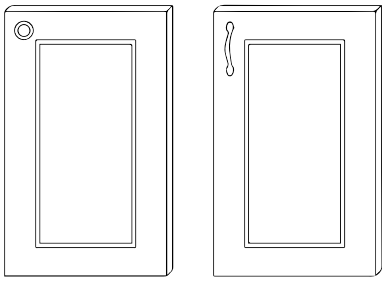

To facilitate drilling, you can make a template to establish the handle holes.

STEPS

1. Check the door opening direction to drill on the correct side.
2. Identify and measure the desired location.
3. Drill and install the handle.

8 Measure, order, and install the countertop

IT IS NOW TIME TO TAKE THE FINAL MEASUREMENTS FOR THE COUNTERTOP.

STEPS


1. Measure the dimensions of the cabinets where you need a countertop. Take note of what will be at the end of the countertops, such as a stove, refrigerator, wall, finishing panel, etc.
2. Bring the measurements to Trifab, if applicable, to have them cut to the required dimensions.


INSTALLATION


1. In cases where there is a 45-degree joint, to protect the joint, apply clear oil-based silicone into the joint and tighten the miter clamps to pull the two countertops together. There should be enough silicone so that it overflows onto the top of the countertop. Remove the excess before it dries. Make sure both countertops are well aligned with each other.
2. Screw the underside of the countertop to the modules by screwing from inside the modules.
3. You can seal the back of the countertop to the wall with a latex sealant if needed to prevent the countertop from swelling in case of water pooling.


AJUSTEMENT

Door hinges

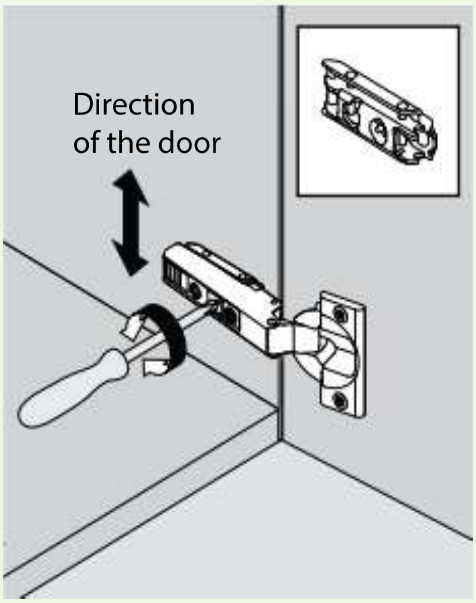


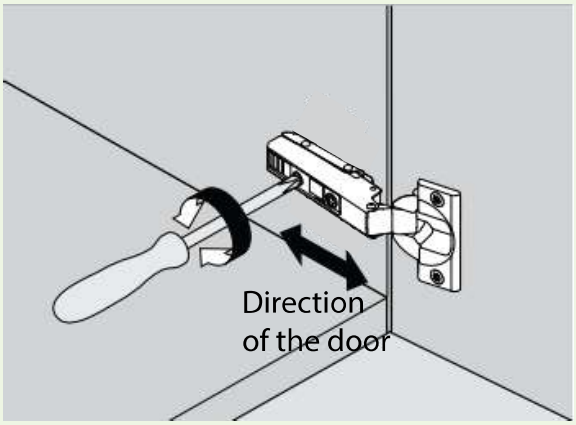


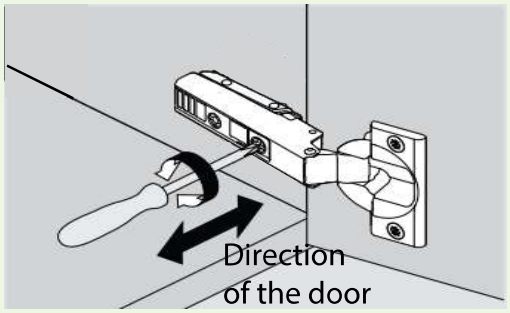

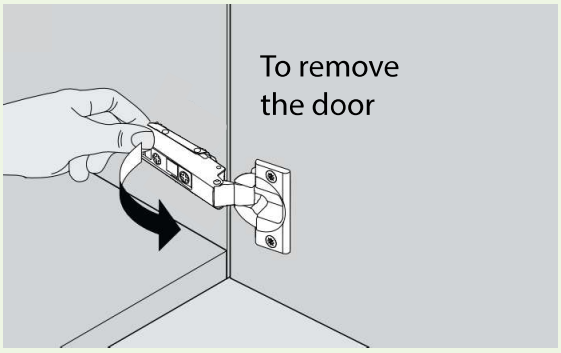


Removing a blumotion drawer

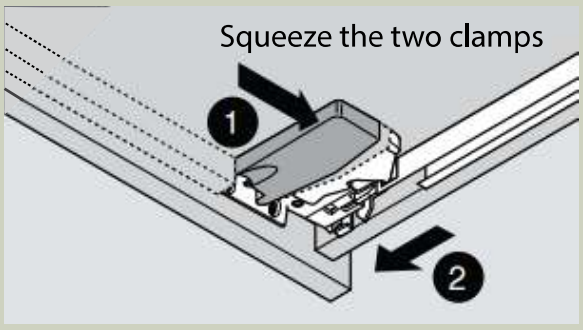


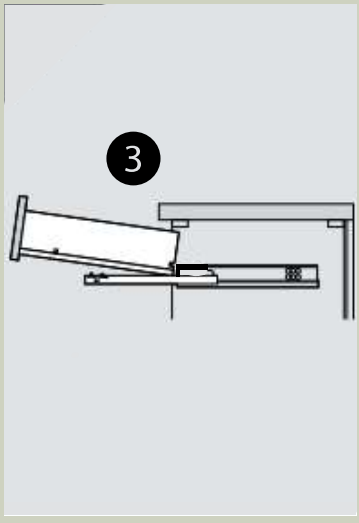

AJUSTEMENT

Standard drawer slides

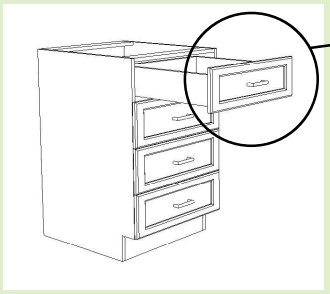


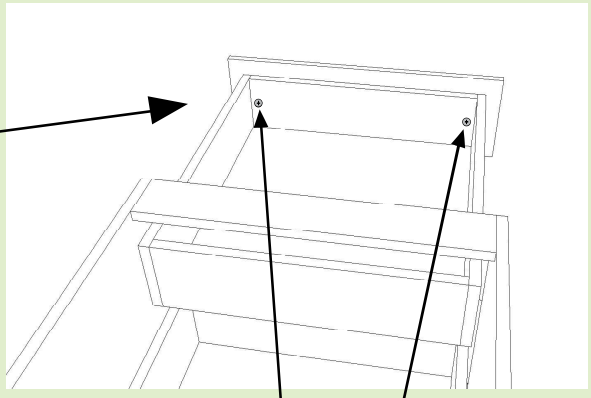


The standard drawer slide system has no adjustable tracking mechanism. You can use these 2 screws inside the drawer box to level the drawer front if necessary.


Blumotion drawer slides


Direction of draawer front

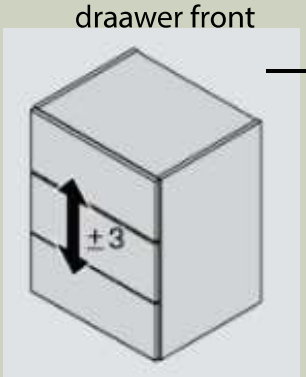

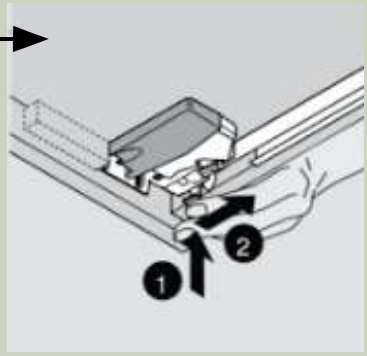

Direction of drawer front

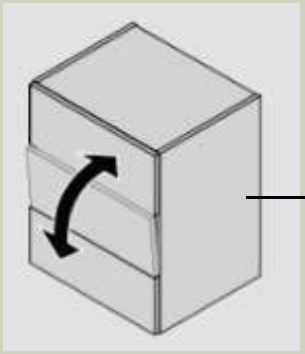

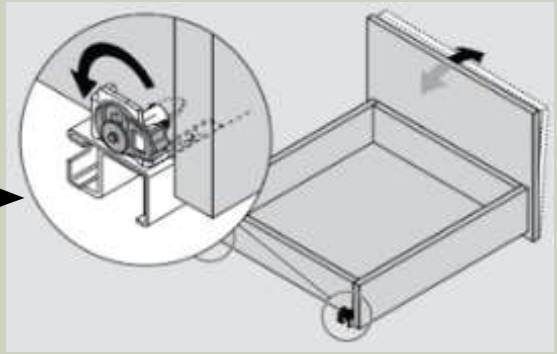

The drawer front is also adjustable as shown above with standard slides.



Important Information

Screws and hardware required for installation are not included. Installation kits are available to order; see the order list under accessories.

Handle drilling is not done at the factory; it must be done during installation.

Doors and fronts require a final adjustment after installation.

Moldings (light valances, crown moldings, filler panels, etc.) are delivered in full lengths. They are not pre-cut or pre-installed on the modules.

It is recommended to seal the filler panels to the floor (toe kick) with an oil-based sealant to prevent water pooling underneath.

In most cases, accessories are not factory-installed and require your installation and adjustment.

No refunds on parts or materials remaining after installation, whether they are cut or not.

It is very important that the cabinets are installed perfectly level, otherwise, there may be door adjustment complications and difficulties with the countertop installation.

The dimensions of the filler pieces indicated on your plans are for reference only and must be cut to the correct dimension on site.

Our team thanks you for choosing us,
and we wish you great success with your project!

Team TRIFAB INC