
Solo COLLECTION

Measurements

Important verifications

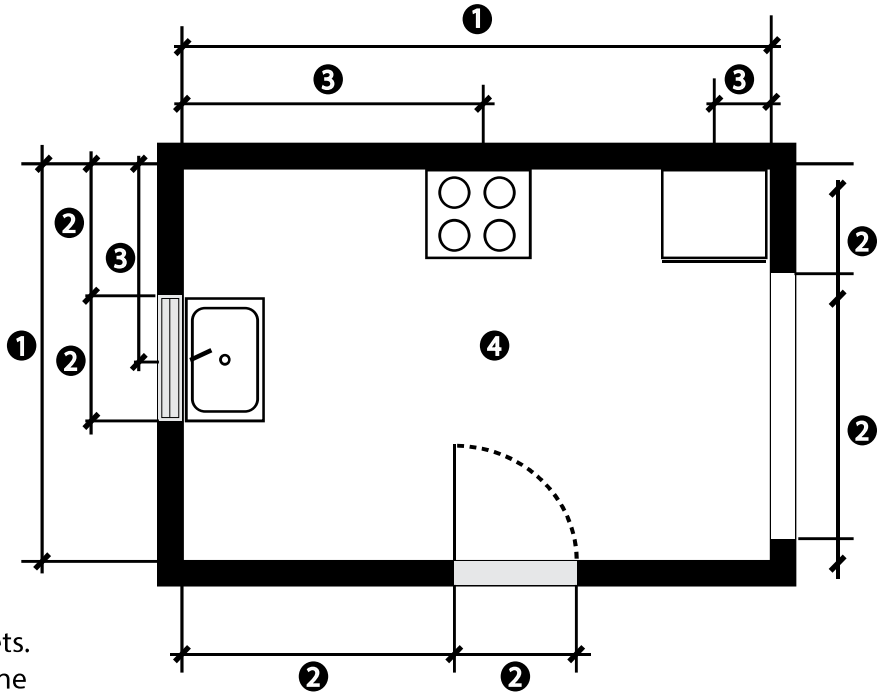

1. MEASURING THE WALLS

- Measure the lenght of your walls
- Note if the measurements are taken with or without sheetrock

2. POSITION OF WINDOWS AND DOORS

- Measure the distance from the corner of the wall to the framing of the windows and/or doors.
- Measure the width and height of your windows including the frame.
- If you plan on changing the framing for a wider or narrower one it is important to include the difference in your measurements.

3. POSITION OF APPLIANCES, PLUMBING AND ELECTRICAL OUTPUTS.

- If your appliances and your sink remain at the same location, measure the distance between the wall that is closest to the centre of the pipes and/or outlets.
- Do the same for all outlets, switches and/or telephone jacks.

4. CEILING HEIGHT

- Measure the height from the floor. This is important if you wish to box off the top of your cabinets or, if the ceiling is lower than standard.

Other important measurements:


- Note the dimensions of the household appliances that you have or plan to order. It is important to know the model of your range, the model will have an impact on the cut of your countertop.
- The recommended distance between two countertops is 36". If you are planning of having an island that would be positionned in front of the refrigerator, the recommended pass way is a minimum of 42".
- Take a special attention to the the pantry cabinet. This cabinet is fabricated in one piece. To be able to place it upright, the height of the ceiling must be at least 87 ½".
- Analyse the path that you will have to go threw to take the cabinets and countertop where you want to install them. Make sure that the cabinets and countertops can pass easily.

Visit our website www.trifab.ca to find printable grid sheets, as well as all the documentation sheets by clicking on the Solo Collection logo.


Solo COLLECTION BY TRIFAB

Solo COLLECTION


Recommendations

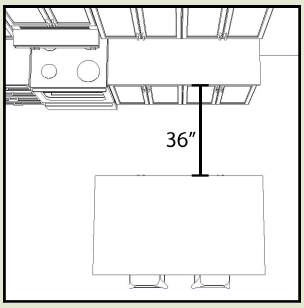


Allow a minimum distance of 36″ between cabinets.

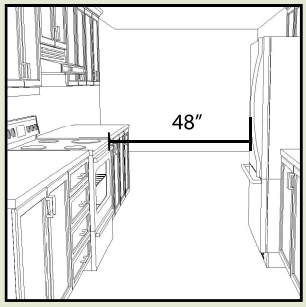


Plan for 48″ of clearance in a situation where appliances could be one in front of each other.

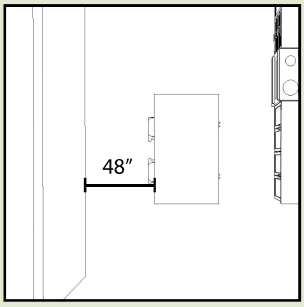


Allow a minimum distance of 48″ between a lunch counter and a wall or obstacle.

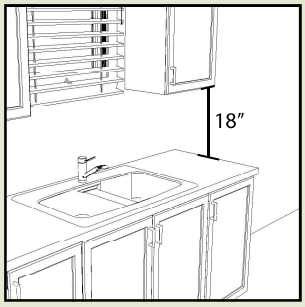


Install the upper cabinets at 18″ above the countertop or at 54″ from the floor. Do not take into account the light molding.

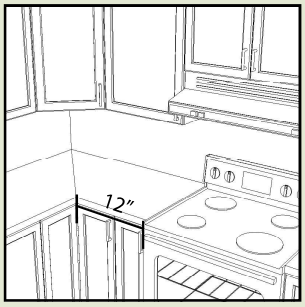


Plan for a width of 12″ between the range and the corner of countertops.

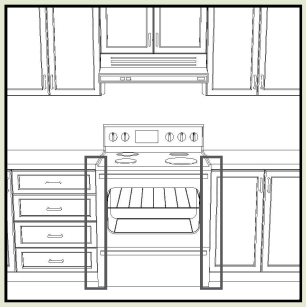

Leave an additional 1/4″ clearance on each side of the range to facilitate it's installation.

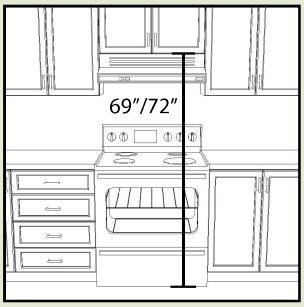


Install the bottom cabinet of a standard hood at a minimum of 69″ from the floor if it's an electric range, and at a minimum of 72″ from the floor if it is a gas range.

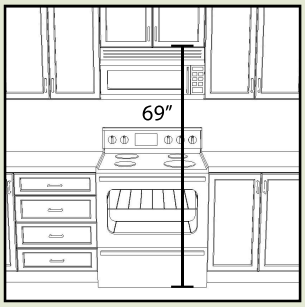


Install the bottom cabinet of a microwave hood at a minimum of 69″ from the floor for an electric range. This type of hood is not installed with a gas range.




Leave a minimum clearance of 1.1/2″ on each side of a chimney hood.

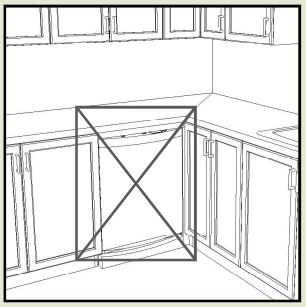


Avoid placing an appliance at the junction of two countertops to avoid creating a conflict of opening between the doors.

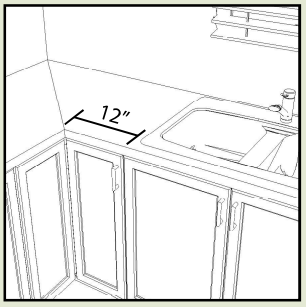

Leave a distance of at least 12″ between the sink and a countertop joint.

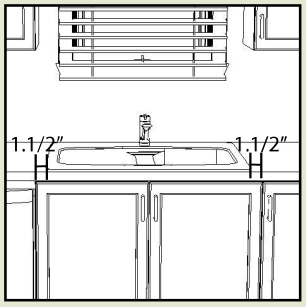


Choose a base for your sink that is at least 3″ wider than the sink.

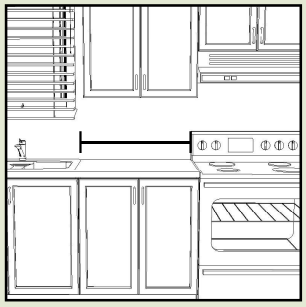


Plan for a space between the range and sink for food preparation.


Bathroom

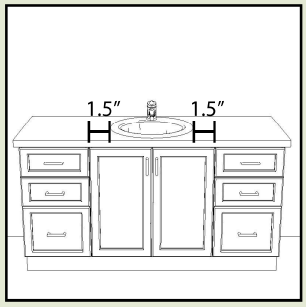


Choose a base for your sink that is at least 3″ wider than the sink.

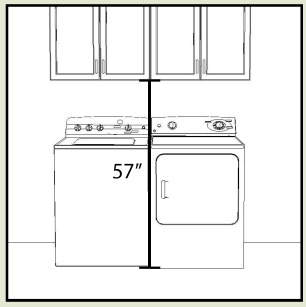


Install the wall cabinets over the washer and dryer at a minimum of 57″ from the floor if the appliances have a door opening from the top.

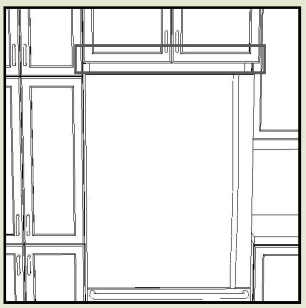

Leave a clearance of at least 1″ above the refrigetator.

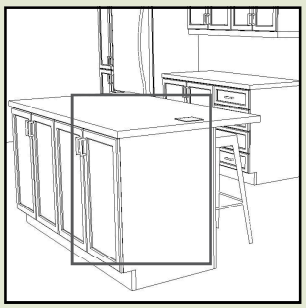

An electrical outlet on an island is required. Plan it's installation in a cabinet.

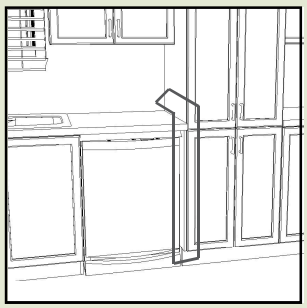

If a dishwasher is adjacent to a refrigerator or pantry pannel, use a dishwasher panel or 1.3/4″ angled brakets to support the countertop.

* The installation heights that are listed for the installation of hoods are recommendations only. Always refer to the installation guide of the hood for the installation height that should be respected.

Solo COLLECTION


Recommendations

All the cabinets in the the Solo Collection are manufactured with finished sides matching the door color.


There for, there is no need to order extra side panels, with the exeption of certain situations.

All filler panels come in lenghts of 96" and must be cut to the desired lenght. A piece of edging will also be supplied.


Filler panels

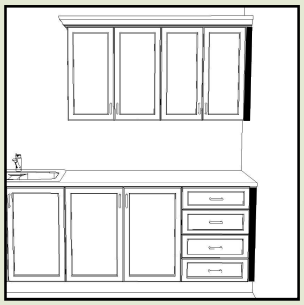


Plan for a 1.1/4" filler panel when a cabinet is adjacent to a wall.

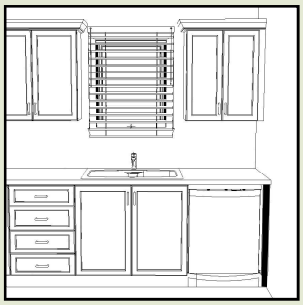


Plan for a 1.1/4" filler panel when a dishwasher is adjacent to a wall, as well as a dish washer panel.

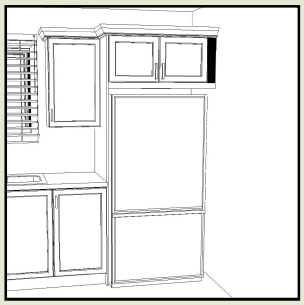

Plan for a filler panel if the refrigerator is adjacent to a wall. Check the refrigerator's specifications to determine the width needed for the filler panel.

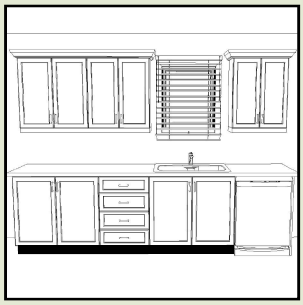


Plan for 4.1/2" high kick plates to cover the unfinished cabinet bottoms.

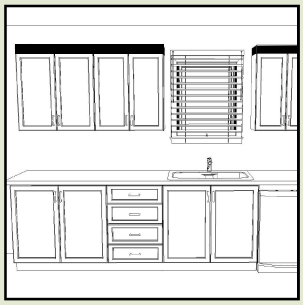


Plan for a 6 to 12" filler panel if you wish to close off your cabinets to the ceiling.

Finishing panels

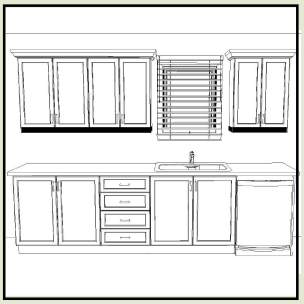


Light moldings are a good way to conceal lights or to conceal the unfinished bottom (white) of your upper cabinets.

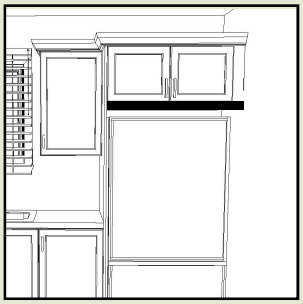


Plan for a light molding below the refrigerator cabinet if there is too much open space between the two of them.

Dish-washer panel

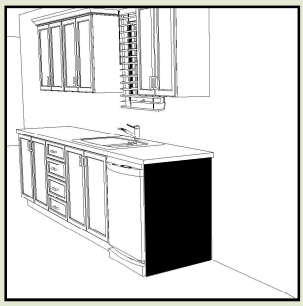

Plan for a dishwasher panel if the side of the dishwasher is exposed.

Full height refrigerator panel

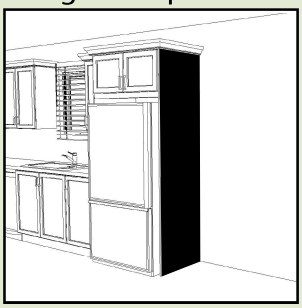


Plan for a refrigerator panel if you wish to hide the side of the refrigerator.

Back and side island pannels



Plan for a back panel on islands.

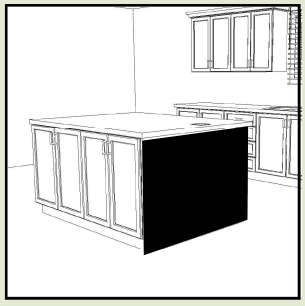

Plan for side panels on islands if there are cabinets back to back.